



1. Check how many light ins on Interlock LED
2. Reset Relay on Interlock Board (Turn in off and turn it on , or reverse)
3. If working, try to replace relay board only
4. Let me know